

 
Tel: +49 5361 5030 Fax: +49 5361 51171

eMail: bremsanhaenger@volke.de

## VOLKE Towing Dynamometer VBA15-5xx 300kW - 15kN



15.000 N (limited by maximum power above 72 kph, cf. drawbar map page 5)
14.000 N up to 40 kph 10.000 N up to 72 kph 4.500 N up to 160 kph Detailed information in drawbar pull map (page 5)
300 / 200 kW
0 - 160 kph (max. speed on public road based on country-specific regulations) Limitation of operation speed is applicable by a password query
1 Air-cooled eddy current brake (ECB) with air ducts and additional electric fan to improve cooling capacity  Operated by thyristor-impulse-controller  Rev limiter: When reaching the ECB rev limit, Dynamometer and remote control resound a warning tone
Two-speed gearbox, shiftable at standstill via remote control - Neutral gear - 1st gear (up to 80 kph), - 2nd gear (up to 160 kph)  Axle gear oil-cooled
Via linear roller-bearing-mounted towbar and HBM U2A load cell
Via ABS wheel speed sensors (slip-dependant)
"100-kph-permission" for motor highways (Germany)  Option: Operating permission for public roads. Modified ballast weight and additional lighting needed. (High-gear use only)  This option is part of the option package. Operating permission carried out by the respective local approval body.



Tel: +49 5361 5030

Fax: +49 5361 51171

eMail: bremsanhaenger@volke.de




VOLKE

**Outer dimensions** 

 Hot-dip galvanized and powder coated steel tube frame with Trailer superstructure and hood hinged fiberglass hood. Support for ballast weight. Storage box for accessories sealed against dust and road spray. Forklift suited lifting points at the rear, workshop lifting platform compliant. Multiple lashing points available Chassis Independent suspension, semi-trailing link type, load capacity up to 2.450 kg Alloy-wheels, dim. 6,5J x 16, fitted with 225 /75 R16C tyres Hydraulic overrun brake operating hydraulic disc brakes. For reversing purpose a back pressure valve is activated by the towing vehicle's backup light signal. Parking brake operation on brake discs with warning device **Electrics** 2 Bosch generators, combined charging current: 200 A Charging capability above 11 kph Optional: Charging capability above 5 kph 24 V main power supply, 2 batteries Weights Laden weight approx.: 2.500 kg (for drawbar pull up to 15.000 N Unladen weight approx.: 1.600 kg (for drawbar pull up to 9.600N) Tongue load: 75 - 100 kg



length: 4.950 mm width: 1.900 mm height: 1.070 mm (approx.)





Tel: +49 5361 5030 Fax: +49 5361 51171 eMail: bremsanhaenger@volke.de

Control  Waterproof (IP67) control unit, passive cooled  Powerful, robust and modular control system( National Instruments), controller and FPGA  Diagnosis functions and monitoring of various system parameters, e.g. battery voltage, ECB voltage and temperature, air temperature etc.  Acoustic warnings during operation in case of unlocked hood, active parking brake or reaching ECB rev limit.  Remote control  4,3" TFT LCD integrated in casing. Dimensions approx.: 200 x 11 x 65 mm (WxHxD)  Menu based control via function buttons, push/turn control knob and an emergency shut-off button.  User interface displays all current operation parameters and warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.  Available menu languages: english, german		
Instruments), controller and FPGA  Diagnosis functions and monitoring of various system parameters, e.g. battery voltage, ECB voltage and temperature, air temperature etc.  Acoustic warnings during operation in case of unlocked hood, active parking brake or reaching ECB rev limit.  Remote control  4,3" TFT LCD integrated in casing. Dimensions approx.: 200 x 11 x 65 mm (WxHxD)  Menu based control via function buttons, push/turn control knob and an emergency shut-off button.  User interface displays all current operation parameters and warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus Online help function with brief instruction, security advices etc.	Control	Waterproof (IP67) control unit, passive cooled
e.g. battery voltage, ECB voltage and temperature, air temperature etc.  Acoustic warnings during operation in case of unlocked hood, active parking brake or reaching ECB rev limit.  Remote control  4,3" TFT LCD integrated in casing. Dimensions approx.: 200 x 11 x 65 mm (WxHxD)  Menu based control via function buttons, push/turn control knob and an emergency shut-off button.  User interface displays all current operation parameters and warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.		
Remote control  4,3" TFT LCD integrated in casing. Dimensions approx.: 200 x 11 x 65 mm (WxHxD)  Menu based control via function buttons, push/turn control knob and an emergency shut-off button.  User interface displays all current operation parameters and warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.		e.g. battery voltage, ECB voltage and temperature, air temperature
Dimensions approx.: 200 x 11 x 65 mm (WxHxD)  Menu based control via function buttons, push/turn control knob and an emergency shut-off button.  User interface displays all current operation parameters and warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.		
and an emergency shut-off button.  User interface displays all current operation parameters and warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.	Remote control	
warnings.  Communication between remote control and towing dynamometer via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.		· ·
via CAN-Bus, cable connection to remote control Ø approx 7 mm  Additional CAN-Bus interface for data logging process parameters by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.		
by remote control (e.g., drawbar pull, speed)  Externally supplied setpoint via CAN-Bus  Online help function with brief instruction, security advices etc.		
Online help function with brief instruction, security advices etc.		
·		Externally supplied setpoint via CAN-Bus
Available menu languages: english, german		Online help function with brief instruction, security advices etc.
		Available menu languages: english, german






Tel: +49 5361 5030 Fax: +49 5361 51171 eMail: bremsanhaenger@volke.de



Operational View (Draw-bar Pull Control)



Drivers Display (option)

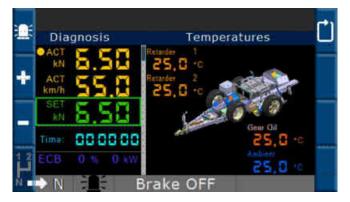


Extensive diagnosic options



 Editor für creating hill profiles (option)







Tel: +49 5361 5030

Fax: +49 5361 51171

eMail: bremsanhaenger@volke.de

**VOLKE** 


Control functions in **Drawbar pull control** standard configuration **Speed control** Anti-lock braking system (ABS) (If tyre slip exceedes threshold the drawbar pull is reduced for a short term) **Optional features** Remote control via wireless connection and interruption-free power-supply by the towing vehicle. Driver assistant display -Additional windscreen-mounted driver assistant display containing realtime operation parameters and driving hill profiles. Set point ramp for speed control In speed control mode a slew rate is integrated into the setpoint adjustment. CAN-data logger for logging operation parameters, also used for troubleshooting and support. CAN-analog-converter to display analog signals containing actual drawbar pull and speed in the remote control user interface. Constant slope mode and trailer simulation-Menu based calculation of drawbar pull with user-editable slope, towing vehicle and trailer parameters (e.g. drag coefficient, towing vehicle weight) Hill profile mode -Menu based hill profile input, realtime drawbar pull control with user-editable towing vehicle and trailer parameters (e.g., drag coefficient, towing vehicle weight). Dynamic trailer simulation -Simulation of mass inertia of the trailer via drawbar pull control during acceleration and deceleration. Online slope correction -Actual slope is detected via Sensors and compensated by drawbar pull control for slope independent drawbar pull. Dead weight trailer simulation -Simulated increase of trailer mass via drawbar pull control during acceleration, deceleration and downward force due to actual slope GPS-measurement for actual speed, displayed and loggable via remote control. 2 spare wheels and wheel retaining mounts inside the chassis, covered by the hood. Transport platform for transport damage prevention. For transportation duties the towing dynamometer will be tied down on the platform, forklift suited lifting points on both sides. Additional control regarding actual towing vehicle values (e.g., fuel injection rate) on request. **Documentation** User manual including brief instruction and maintenance interval in english or german language. Wear and spare part list. These are mainly available from automotive suppliers. **Electric wiring diagrame** 



Tel: +49 5361 5030 Fax: +49 5361 51171

eMail: bremsanhaenger@volke.de



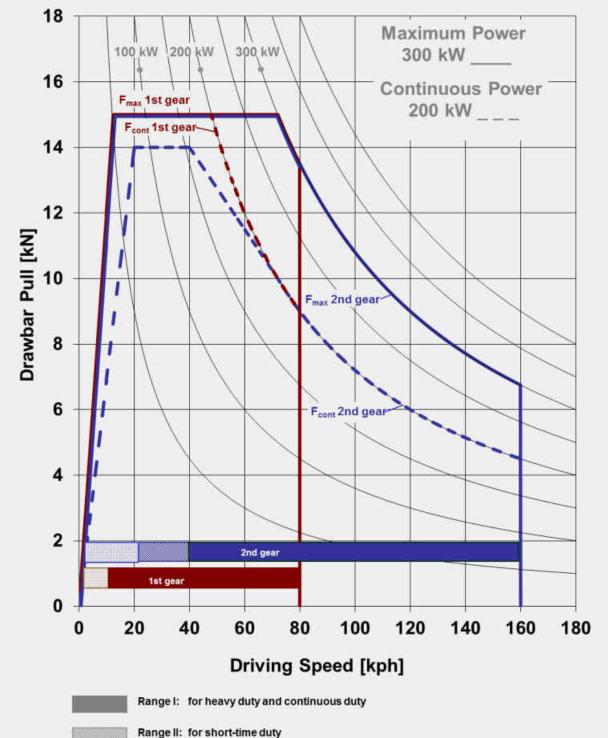

Range III: for short-time (t < 30 min.), eddy current brake operated by battery